

PGDE000F*0/PGDE000W*0 pCO Graphic Display



→ **LEGGI E CONSERVA
QUESTE ISTRUZIONI** ←
**READ AND SAVE
THESE INSTRUCTIONS**

Panel mounting terminal

Wall mounting terminal

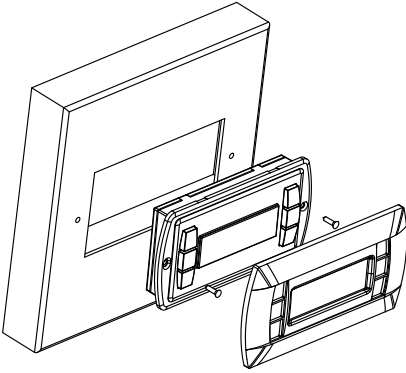


Fig. 1

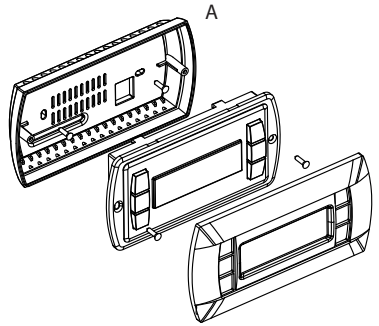


Fig. 2

Configuring the address

```
Display address
setting.....:nn
I/O Board address:xx
```

Fig. 3

```
Display address
changed
```

Fig. 4

Assigning the list of private and shared terminals

```
Terminal Conf9
Press ENTER
to continue
```

↓

```
P12:Adr  Priu/Shared
Trm1 02    Sh
Trm2 03    Ph
Trm3 None  --OK?NO
```

Fig. 5

Assigning the list of private and shared terminals

```

NetSTAT 1.0000.....8
T:xx 3.....16
Enter 17.....24
To quit:25.00.....32
    
```

Fig. 6

```

PGD1 V1.0
Mar 26 2004
HW#A
    
```

Fig. 7

Dimensions

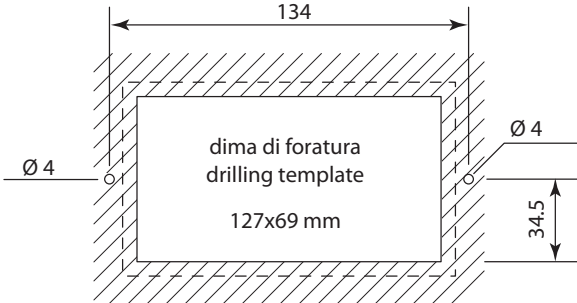


Fig. 8

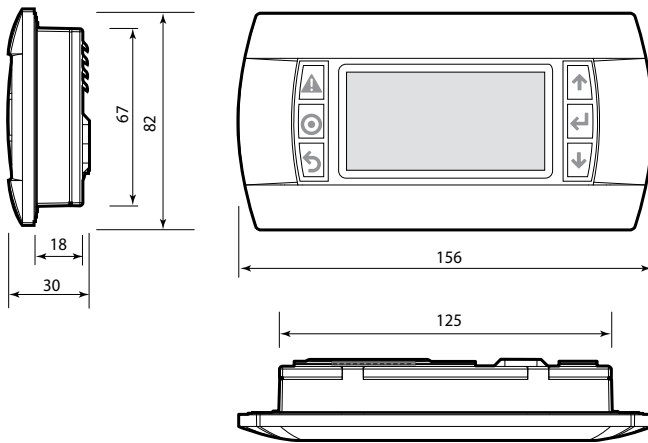


Fig. 9

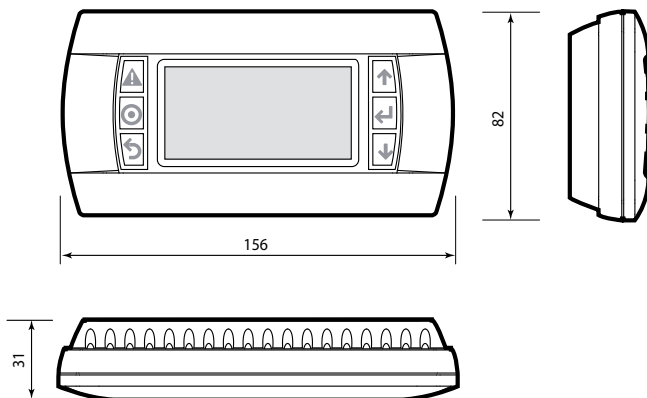


Fig. 10



Disposal of the product

The appliance (or the product) must be disposed of separately in compliance with the local standards in force on waste disposal.



Important warnings:

The CAREL product is a state-of-the-art device, whose operation is specified in the technical documentation supplied with the product or can be downloaded, even prior to purchase, from the website www.carel.com. The customer (manufacturer, developer or installer of the final equipment) accepts all liability and risk relating to the configuration of the product in order to reach the expected results in relation to the specific final installation and/or equipment. The failure to complete such phase, which is required/indicated in the user manual, may cause the final product to malfunction; CAREL accepts no liability in such cases. The customer must use the product only in the manner described in the documentation relating to the product. The liability of CAREL in relation to its products is specified in the CAREL general contract conditions, available on the website www.carel.com and/or by specific agreements with customers.

ENG

The pGD graphic display is an electronic device that is compatible with the previous PCOI/PCOT line terminals; it allows complete management of graphics by the display of icons (defined at an application software development level), as well as the management of international fonts, in two sizes: 5x7 and 11x15 pixels. The application software resides on the pCO board, and therefore the terminal does not require any additional software for operation.

Furthermore, the terminals feature a wide operating temperature range (-20T60 °C) and in the built-in version, the front panel ensures a high index of protection (IP65).

Model codes

	White Backlight	White Backlight con buzzer
Built-in or panel-mounted version	PGDE000F00	PGDE000FZ0
Wall-mounted version	PGDE000W00	PGDE000WZ0

Panel-mounted version (code PGDE000F*0)

These terminals have been designed for panel installation; the drilling template measures 127x69 mm and has 2 circular holes, 4 mm in diameter, as shown in Fig. 8. For installation, proceed as follows:

- Connect the telephone cable;
- Insert the terminal, with the front frame removed, into the opening, and fasten the device to the panel using the flush-head screws, supplied in the packaging, as shown in Fig. 1;
- Finally, fit the click-on frame.

Wall-mounted version (code PGDE000W*0)

The wall-mounting of the terminal first requires the back piece of the container A (Fig. 2) to be fitted, using a standard three-module switch box.




- Fasten the back piece to the box using the rounded-head screws supplied in the packaging;
- Connect the telephone cable;
- Rest the front panel on the back piece and fasten the parts together using the flush-head screws supplied in the packaging, as shown in Fig. 2;
- Finally, fit the click-on frame.





Electrical connection

Connect the telephone cable (code S90CONN00*) from the pCO board to the connector provided (RJ12) on the rear of the terminal.

Configuring the address

The address of the terminal can be configured only after having connected the power supply, using the RJ12 telephone jack (the factory default value is 32).












To access configuration mode, press the    buttons (present on all versions) together and hold them for at least 5 seconds; the screen shown in Fig. 3 will be displayed, with the cursor flashing in the top left corner:

- To change the address of the terminal (display address setting), press the  button once: the cursor will move to the address field (nn).
- Use the   buttons to select the desired value, and confirm by pressing  again. If the value selected is not the same as the one saved previously, the screen shown in Fig. 4 will be displayed, and the new value will be saved to the permanent memory.

If the field nn is set to 0, the terminal will communicate with the pCO board using "point-to-point" protocol (not pLAN) and the field "I/O Board address: xx" will not be displayed, as it has no meaning.

pCO: assigning the list of private and shared terminals

At this point, if the list of terminals associated with each individual pCO board needs to be modified, proceed as follows:

- Access configuration mode using the    buttons, as described in the previous paragraph;
- Press the  button until the cursor moves to the field xx (I/O board address) Fig. 3;
- Use the   buttons to select the pCO board in question. The values available correspond to the pCO boards that are effectively on line. If the pLAN network is not working correctly, or if no pCO board is present, the field cannot be modified, and the symbol "—" will be displayed;
- Pressing  again displays the screens shown in Fig. 5, in sequence;
- Here too, the  button moves the cursor from one field to the next, and the   buttons change the value of the current field. The field P:xx shows the address of the board selected; in the example shown in the figure, the value 12 has been selected;
- To exit the configuration procedure and save the data, select the field "OK ?", choose Yes and confirm by pressing .

The fields in the "Adr" column represent the addresses of the terminals associated with the pCO board that has address 12, while the Priv/Shared column indicates the type of terminal.

Note: the pGD terminals cannot be configured as "Sp" (shared printer), as they have no printer port. If the terminal remains inactive (no button is pressed) for more than 30 seconds, the configuration procedure is exited automatically, without saving any changes.

Fault signals

If the terminal detects the off-line status of the pCO board it is associated with, the display shows the message: **I/O Board xx fault.**

On the other hand, if the terminal receives no signal from the network, the display shows the following message: **NO LINK.**

Displaying the status of the network and firmware version

Pressing the configuration buttons (**↓ ↑ ↶**) together for at least 10 seconds (in pLAN mode only), displays the screen shown in Fig. 6.

The screen shown in Fig. 6 provides an example of the status of the pLAN, displaying which and how many devices are connected, and the corresponding addresses.

Key:

 pCO controllers active in network

 terminals active in network

 no device connected

The example in Fig. 4 represents:

pCO controllers active in network, addresses: 1, 2, 25

terminals active in network, addresses: 3, 4, 15, 26.

The **↓ ↑ ↶** buttons can be used to display the version of the firmware resident in the terminal (Fig. 7). To exit the NetSTAT procedure, press **↶**.

Contrast adjustment

Use **▲+ ○ + ↓ ↑** buttons to adjust the contrast.

Technical specifications

Display

Type	FSTN graphic
Backlighting:	white LEDs (controlled by "application software"), depending on the cod.
Graphic resolution:	132x64 pixel
Text mode:	8 rows x 22 columns (font sizes 5x7 and 11x15 pixels) 4 rows x 11 columns (font size 11x15 pixels) or mixed modes
Character height:	3,5 mm (font 5x7 pixel) 7,5 mm (font 11x15 pixel)
Size of active area:	66x32 mm
Size of display area:	72x36 mm

Keypad LEDs / Buzzer

2 programmable by "application software", red and orange (**○ + ▲** buttons)

4 green LEDs, used as backlighting for LCD (**↓ ↑ ↶** and **↷**)

Buzzer (optional - models *z0)

Power supply

Voltage:	power supply from pCO through telephone cable or external source 18/30 Vdc protected with 2 250 mA T fuse
Maximum power input:	0,8 W

Maximum distances

Maximum pLAN length:	500 m with AWG22 twisted pair cable
pCO terminal distance:	50 m with telephone cable 500 m with AWG22 twisted pair cable and TCONN6J000 Note: to reach the maximum length, use a bus layout, with branches not exceeding 5 m.

Materials

Transparent front panel:	transparent polycarbonate
Charcoal grey container back piece (wall/built-in):	polycarbonate +ABS
Keypad:	silicon rubber
Transparent cover glass/frame:	transparent polycarbonate
Self-extinguishing classification:	V0 for transparent front panel and back piece HB for silicon keypad and remaining parts

Others

Index of protection:	IP65 for panel mounting IP40 for wall mounting UL type 1
Operating conditions:	-20T60 °C, 90% U.R. non-condensing
Storage conditions:	-20T70 °C, 90% U.R. non-condensing
Software class and structure:	A
Classification according to protection against electric shock:	To be integrated into class 1 or 2 devices
PTI of insulating materials:	PCB: PTI 250; insulation material PTI 175
Period of electric stress across insul. parts:	long
Category of resistance to fire and heat:	D
Immunity against voltage surges:	Category II
Environmental pollution:	2